CE

Vegital®

KÁVÉDARÁLÓ



VEGITAL KÁVÉDARÁLÓ

HASZNÁLATI ÚTMUTATÓ

Kedves Vásárlónk!

Köszönjük, hogy a Vegital kávédarálót választotta! Ezzel a készülékkel lehetősége nyílik arra, hogy mindig frissen őrölt kávéból készítse el italát – közvetlenül a főzés előtt, amikor az aromák a legintenzívebbek.
A gondosan kialakított őrlőrendszer kíméletesen dolgozza fel a kávészemeket, így azok természetes ízjegyei és illatai jobban érvényesülnek.

Az őrlési finomság széles tartományban szabályozható, így könnyedén megtalálhatja a különböző elkészítési módokhoz való őrlési méretet attól függően, hogy filteres kávéfőzőt, vagy a kézi forrázást részesíti előnyben. A készülék alkalmas kisebb, egycsészés mennyiségtől egészen több adag kávé elkészítéséhez szükséges őrlemény gyors és egyenletes előállítására.

Kívánjuk, hogy sok öröme legyen új Vegital kávédarálójában, és még több élményt nyújtson a frissen őrölt
kávé illata és íze!

A Vegital csapata



TARTALOMJEGYZÉK

MAGYAR NYELVŰ ÚTMUTATÓ

1. Rövid kávé ismertető
2. Fontos biztonsági előírások
3. Termék specifikáció/műszaki adatok
4. A kávédaráló részei
5. Első használat előtt
6. A kávédaráló használata
7. Karbantartás és tisztítás
8. Hulladékkezelés
9. Hibaelhárítás







1. KIS ÚTMUTATÓ A FRISS, AROMÁS KÁVÉHOZ

A kávészemek frissessége
A jó kávé alapja mindig a friss szemes kávé. Érdemes kisebb mennyiséget tartani otthon, és gyakrabban utántölteni, így az aromák nem vesznek el.

Hogyan tároljuk a kávét?
A szemes kávét légmentesen zárva, hűvös helyen ajánlott tárolni.
Hűtőben akár 3 hétig, fagyasztva több hónapig is megőrzi frissességét.

Az őrölt kávét csak rövid ideig, lehetőleg 24 órán belül használja fel, mert gyorsan veszít aromájából.

Őrlési finomság – melyik mire való?
A megfelelő szemcseméret nagyban befolyásolja a végeredményt:
Finom őrlés – eszpresszó
Közepes őrlés – filteres kávé, kézi forrázás
Durva őrlés – french press, cold brew

Egyszerű szabály:
Minél finomabb az őrlés, annál rövidebb ideig érintkezzen vízzel.
Ha a túl finom őrleményt hosszabb ideig áztatjuk, a kávé keserű lesz.

Tipp a tökéletes beállításhoz
Kezdje a középértéknél, majd állítson egy-két fokozatot finomabb vagy durvább irányba, amíg meg nem találja az Önnek legjobban tetsző eredményt.
A kávé típusa, a víz hőmérséklete és keménysége szintén befolyásolja az ízvilágot, így érdemes kísérletezni.

2. FONTOS BIZTONSÁGI ELŐÍRÁSOK

Kérjük, a készülék használata előtt figyelmesen olvassa el az útmutatót! Az elektromos készülékek használata során mindig tartsa be az alapvető biztonsági szabályokat.

A Vegital kávédaráló kizárólag **szemes kávé őrlésére** készült, és **háztartási mennyiségek** előállítására alkalmas.
A készülék nem használható folyamatos, nagy igénybevételű környezetben – például ipari konyhákban, szállások vendégforgalmában, irodai teakonyhákban vagy bármilyen professzionális felhasználói környezetben.
A daráló kizárólag **száraz, beltéri helyiségben** üzemeltethető.

Használat előtt:
1. Olvassa el és őrizze meg az útmutatót.
2. A készüléket használat előtt és tisztításkor mindig húzza ki a hálózati aljzatból.
3. A készüléket kizárólag rendeltetésszerűen használja – kávészemek őrlésére.
4. Ne hagyja a készüléket gyermekek közelében felügyelet nélkül.
5. A készülék nem játék – gyermekek nem használhatják.
6. A készüléket csak olyan személy használhatja önállóan, aki megfelelő fizikai és mentális állapottal, illetve elegendő tapasztalattal rendelkezik. Amennyiben ezek közül bármelyik korlátozott, a kávédarálót csak felügyelet mellett, vagy megfelelő útmutatás birtokában szabad használni, a lehetséges veszélyek ismeretében.
7. A csomagolóanyagokat tartsa távol gyermekektől, mert fulladásveszélyt jelenthetnek.
8. Ne hagyja a készüléket őrlés közben felügyelet nélkül.
9. A készüléket **ne hagyja működés közben felügyelet nélkül.**
10. A darálót csak olyan, **szakszerűen kiépített aljzatba csatlakoztassa,** amelynek feszültsége megfelel a készülék műszaki előírásainak.
11. Csak stabil, vízszintes felületen üzemeltesse.
12. Ne érintse meg a készüléket nedves kézzel.
13. A kávédarálót és a hálózati csatlakozót **soha ne merítse vízbe,** mert ez súlyos áramütésveszélyt jelent.
14. Ne használjon a gyártó által nem ajánlott tartozékot.
15. Ne tisztítsa folyóvíz alatt a daráló testet.
16. Ne használja a készüléket, ha a hálózati kábel megsérült.
17. A daráló működő részeihez ne nyúljon bele kézzel vagy eszközzel.
18. A készüléket azonnal kapcsolja ki rendellenes működés esetén.
19. A készüléket ne használja üresen.
20. A készüléket ne tegye ki túlmelegedésnek vagy közvetlen napfénynek.
21. Húzza ki a hálózati csatlakozót, mielőtt szétszerelne vagy alkatrészt eltávolítana.

BIZTONSÁGI ELŐÍRÁSOK

Ha hosszabbítót használ, annak meg kell felelnie a készülék műszaki követelményeinek.
Bizonytalanság esetén kérjen tanácsot szaküzletben.
A készüléket mindig kapcsolja ki és húzza ki a konnektorból:

- rendellenes működés esetén,
- használat után,
- ha felügyelet nélkül hagyja,
- mielőtt a babtartályt vagy az őrleménytartályt felhelyezi vagy eltávolítja,
- vihar idején,
- tisztítás előtt.

Mindig a **csatlakozónál fogva húzza ki,** ne a kábelt rángassa.

- A csatlakozóaljzat legyen könnyen elérhető, a kábel pedig úgy legyen elhelyezve, hogy ne lehessen megbotlani benne és ne rántsa le a készüléket.
- A hálózati kábel ne törjön meg, ne kerüljön éles vagy forró felület közelébe.
- Ne használja a készüléket, ha bármely alkatrésze – különösen a kábel – sérült, vagy ha a készülék leesett.
- A készüléken semmilyen átalakítást ne végezzen. A hálózati kábel cseréjét és minden javítást csak szakember végezhet. A nem szakszerű javítás balesetveszélyes.

Sérülésveszély

- A mozgatható alkatrészek vágási vagy becsípő¬dés miatti sérüléseket okozhatnak. A darálót soha ne használja őrleménytartály vagy babtartály fedél nélkül.
- Őrlés közben ne nyúljon a tartályba, és ne helyezzen a darálóba idegen tárgyat.
- Tisztítás vagy elakadás eltávolítása előtt mindig húzza ki a készüléket.
- A tisztítással kapcsolatos további tudnivalókat a „Tisztítás" fejezetben találja.
- A készülék nem rendeltetésszerű használata sérülést okozhat.

Anyagi károk elkerülése

- A kávédaráló rövid üzemidőre készült: kb. 2 perc használat után hagyja 10 percig hűlni.
- Csak stabil, tiszta, jól hozzáférhető felületre helyezze.
- Tartsa távol hőforrásoktól (pl. tűzhely, sütő).
- Ne használjon maró vagy súroló tisztítószert.
- Csak eredeti tartozékokat használjon.
- A készülékkel kizárólag kávét daráljon – más alapanyag károsíthatja.
- Használat előtt ellenőrizze, hogy nincs-e idegen tárgy a babtartályban.
- Ne működtesse a darálót üresen.
- Óvja a készüléket nedvességtől, nagy hőmérséklet-ingadozástól, portól és erős rázkódástól.
- Egyes bútorfelületek anyagai kárt tehetnek a csúszásgátló talpakban; szükség esetén használjon alátétet.

3. MŰSZAKI ADATOK

EU-CG836B

Paraméter	**Érték**
Modell	CG836B
Tápellátás	220–240V, 50/60Hz
Teljesítmény	200 W
Babtartály kapacitás	6.7 oz / ~190 g
Őrlőkamra kapacitás	3.5 oz / ~100 g
Nettó tömeg	2.5 lb ~1130 g
Méretek	16.5 × 12.7 × 24.6 cm

4. A KÁVÉDARÁLÓ RÉSZEI

1. Kávébabtartály fedél
2. Kávébabtartály
3. Felső őrlő tárcsa
4. Időzítő LED kijelző
5. BEKAPCSOLÓ/KIKAPCSOLÓ (On/Off) gomb
6. Őrlési idő beállító tárcsa
7. Őrlési finomság szabályzó
8. Őrlemény-gyűjtő tartály fedél
9. Őrlemény-gyűjtő tartály
10. Tisztítókefe
11. Kávéőrlemény-maradék kiürítő gomb



5. ELSŐ HASZNÁLAT ELŐTT

1. A készüléket mindig áramtalanítsa tisztítás előtt.
2. Vegye ki az őrlemény gyűjtő tartályt.
3. Csavarja a babtartályt balra (ellenkező irányba), amíg az „unlock" jelzéshez igazodik, majd emelje le.
4. A babtartályt és az őrlemény gyűjtő tartályt mossa el langyos, mosogatószeres vízzel.
5. Szárítsa meg alaposan.
6. Ne használjon durva szivacsot vagy maró hatású tisztítószert!
7. Helyezze vissza a tartályokat, a babtartályt jobbra csavarva rögzítse az „lock" jelzéshez.

6. A KÁVÉDARÁLÓ HASZNÁLATA

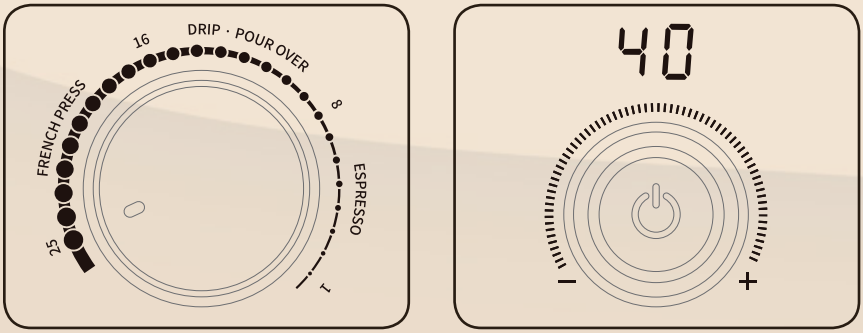

6.1. Őrlési finomság beállítása

A készülék 25 fokozatot kínál a durvától a finomig.

- Finom beállítás –> több finom őrleményt, kevesebb szemcsét eredményez
- Durva beállítás –> kevesebb finom őrleményt, nagyobb szemcséket őröl

Használat előtt mindig állítsa be az őrlési fokozatot.

Az őrlési fokozat aktuális beállítása nem a kijelzőn, hanem kizárólag az őrleményfinomság-állító gyűrűn látható.

A kívánt őrlési fokozatot 1 (finom) és 25 (durva) között állítsa be még a kávészemek betöltése előtt, így elkerülhető, hogy a szemek az őrlőműben elakadjanak.

A megadott értékek csak iránymutatások; a legmegfelelőbb beállítást az adott kávéfajta és elkészítési mód alapján kísérletezéssel találhatja meg.

1 – 8 = finom őrlemény; eszpresszó elkészítéséhez alkalmas

8 – 16 = közepesen finom őrlemény; háztartásokban szokásos filteres kávé elkészítéséhez alkalmas

17 – 25 = durva őrlemény; dugattyús kávéfőzővel történő elkészítéshez alkalmas

6.2. Őrlési idő beállítása

- Az időzítő maximum 40 másodpercig állítható.
- Nyomja meg a + vagy – gombot az idő módosításához.

6.3. Őrlés indítása

1. Állítsa be az őrlési finomságot.
2. Töltse fel a babtartályt kávészemekkel.
3. Helyezze vissza a fedelet.
4. Állítsa be az időt.
5. Nyomja meg a BE/KI gombot.
6. A készülék automatikusan leáll az idő letelte után.

Megjegyzés: Bármikor megszakíthatja a darálást a BE/KI gomb ismételt megnyomásával.

6.4. Őrlemény eltávolítása

- Rázza meg a tartályt, hogy a falra tapadt őrlemény is leessen.
- Szükség esetén használja a tisztítókefét.

1. A készüléket mindig áramtalanítsa tisztítás előtt.
2. Vegye ki az őrlemény gyűjtő tartályt.
3. Csavarja a babtartályt balra (ellenkező irányba), amíg az „unlock" jelzéshez igazodik, majd emelje le.
4. A babtartályt és az őrlemény gyűjtő tartályt mossa el langyos, mosogatószeres vízzel.
5. Szárítsa meg alaposan.
6. Ne használjon durva szivacsot vagy maró hatású tisztítószert!
7. Helyezze vissza a tartályokat, a babtartályt jobbra csavarva rögzítse az „lock" jelzéshez.

7. KARBANTARTÁS ÉS TISZTÍTÁS

VESZÉLY – áramütés kockázata

• A készülék tisztítása előtt mindig húzza ki a hálózati csatlakozót.
• A darálót ne érje nedvesség – óvja a fröccsenő víztől és ne merítse vízbe.

FIGYELEM – anyagi károk elkerülése

• Ne használjon maró, súroló vagy agresszív tisztítószert.
• A tisztítást mindig óvatosan, a burkolat épségét megőrizve végezze.

A készülék szétszerelése és tisztítása

1. Húzza ki a hálózati csatlakozót.
2. Vegye ki az őrleménytartályt, majd távolítsa el a fedelét.
3. Öntse ki a maradék őrleményt.
4. A tartályt és a fedelét mossa el meleg vízzel, enyhe mosogatószerrel, majd teljesen szárítsa meg, mielőtt visszahelyezi.

A babtartály (kávétartály) eltávolítása

1. Forgassa el a babtartályt az óramutató járásával ellentétes irányba, amíg a nyíl a nyitott lakat jelre nem mutat.
2. Húzza felfelé és emelje le a tartályt.
3. Vegye le a fedelet, és szükség esetén ürítse ki a tartályt.
4. A tartályt és a fedelet meleg, mosogatószeres vízzel tisztítsa meg, majd hagyja teljesen kiszáradni, mielőtt ismét kávészemeket tölt bele.

Az őrlőmű tisztítása

• A mellékelt tisztítókefével rendszeresen seperje ki az őrlőművet.

Az alapos tisztításhoz vagy az esetleg beszorult kávészemek/idegen tárgyak eltávolításához járjon el így:

1. Fogja meg a levehető tölcsért, majd fordítsa el enyhe erővel az óramutató járásával ellentétes irányba, amíg kiakad.
2. Húzza felfelé és emelje ki a készülékből.
3. Tisztítsa meg az őrlőmű belsejét a tisztítókefével, távolítson el minden ott rekedt szemcsét vagy idegen tárgyat.
4. A készülék külső burkolatát szükség esetén törölje le enyhén nedves kendővel, majd puha, száraz ronggyal törölje át.

A készülék összeállítása

• Összeszerelés előtt győződjön meg arról, hogy nem maradt kávészem vagy őrlemény az őrlőműben.

• Minden alkatrész legyen száraz, mielőtt visszahelyezi.

• A részeket a megfelelő pozícióba illesztve, a jelölésekhez igazítva helyezze vissza.

8. HIBAELHÁRÍTÁS

A készülék nem őröl

Lehetséges ok	Megoldás
• A babtartály nincs rögzítve	• Csavarja jobbra, amíg a „lock” jelhez nem igazodik
• Az őrlőmű nincs a helyén	• Helyezze vissza megfelelően
• A BE/KI gomb nem lett megnyomva megfelelően	• Nyomja meg újra
• A készülék nincs áram alá helyezve	• Csatlakoztassa az áramforráshoz

Kevés őrlemény készül

Lehetséges ok	Megoldás
• Rossz őrlési beállítás	• Állítsa finomabbra
• Kevés kávé a tartályban	• Töltsön hozzá kávébabot
• A darálótárcsák eltömődtek	• Tisztítsa meg a az őrlőművet

A készülék leáll őrlés közben

Lehetséges ok	Megoldás
• A készülék túlmelegedett	• Húzza kiaz áramforrásból és várjon 15 percet
• Áramszünet	• Várjon, míg az áramellátás helyreáll

9. HULLADÉKKEZELÉS

A készülék és csomagolása újrahasznosítható anyagokból készült, ezért kérjük, a hulladék megfelelő szétválasztásával járuljon hozzá a környezet védelméhez. A papír-, karton- és könnyű csomagolóanyagokat helyezze a helyi **szelektív gyűjtőkbe.** A készülék **nem dobható háztartási hulladék közé.** A jogszabály előírja, hogy az elhasznált elektromos berendezéseket külön, erre kijelölt gyűjtőponton kell leadni. Az elektromos eszközök olyan anyagokat tartalmazhatnak, amelyek nem megfelelő ártalmatlanítás esetén károsíthatják a környezetet és az egészséget. A díjmentes leadási lehetőségekről a helyi önkormányzat vagy hulladékgazdálkodó szolgáltató tud felvilágosítást adni.

Kívánjuk, hogy teljen sok öröme a készülék használatában!

Model: CG836B
Importőr: ARTIS Kft. – 8000 Székesfehérvár, Bem u. 40.
Elérhetőségek:
Webshop: **www.vegital.hu**
Facebook: **Vegital, a tejmentes ital**
Telefonszám: **06707779220**
Email: **info@vegital.hu**
Műszaki probléma esetén az alábbi telefonszámon érhető el szervizünk:
Tel: **06 20 524 5156,** illetve a **www.vegital.hu/szerviz** űrlap kitöltésével lehet jelezni a hibát.

CE

Vegital®

COFFEE GRINDER



VEGITAL COFFEE GRINDER

USER MANUAL

Dear Customer,

Thank you for choosing the Vegital coffee grinder. With your new appliance, you can grind your coffee beans freshly right before brewing, ensuring that the natural aromas and flavors remain preserved until the moment of preparation.

The grinder's carefully designed burr mechanism processes the beans gently, allowing the coffee's characteristic notes to fully unfold.
You can set the grinding fineness across a wide range – from very fine to coarse – depending on whether you are preparing espresso, filter coffee or manual pour-over.

The appliance can grind enough coffee for a single cup or even for up to twelve servings in one cycle.

Thanks to the precise built-in measuring function, you will quickly discover the exact amount that suits your taste best, ensuring a consistently balanced and enjoyable cup every time.
We wish you great enjoyment using your new Vegital coffee grinder!

The Vegital Team



TABLE OF CONTENTS

ENGLISH USER MANUAL

1. Short Coffee Guide
2. Important Safety Instructions
3. Product Specifications
4. Parts of the Coffee Grinder
5. Before First Use
6. Using the Coffee Grinder
7. Maintenance and Cleaning
8. Disposal
9. Troubleshooting





1. SHORT COFFEE GUIDE

The quality of the coffee beans

The freshness of the beans is essential for a truly outstanding coffee experience. Always use fresh coffee beans.

Storing coffee beans

Do not overfill the bean container; instead, refill it more frequently to prevent the beans from losing their aroma.

Store any remaining beans in an airtight container. When kept in the refrigerator, coffee beans can stay fresh for up to three weeks.

You may also freeze coffee beans — they will keep for up to three months in the freezer.

Storing ground coffee

Grind only as much coffee as you need for brewing.

Do not store ground coffee in the container for more than 24 hours.

If you do need to store leftover grounds, keep them in a cool, dry place in an airtight container.

Choosing the right grind size

A simple rule of thumb:

The finer the grind, the shorter the contact time with water — and conversely, **the coarser the grind, the longer the coffee should be in contact with water.**

This is why:

- espresso machines require *very fine* coffee,
- filter coffee makers and manual pour-over methods work best with a *medium* grind,
- French press and cold brew/drip methods require a *coarse* grind.

If finely ground coffee stays in hot water too long — as in a filter or French press — the result can be a bitter taste.

To find the grind size that suits your preferred coffee, check the symbols on the grind adjustment ring.

The best approach is to start at the middle setting. Then adjust finer or coarser by one or two steps until you discover your ideal grind.

Keep in mind that, besides the type of coffee and brewing method, the **hardness of the water** and the **temperature of the brewing water** can also significantly influence the taste.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using the appliance.
Always follow basic safety precautions when operating electrical appliances.

Intended Use

The Vegital coffee grinder is designed exclusively for grinding coffee beans and is suitable for **household quantities.**
The appliance must **not be used in continuous, high-demand environments,** such as industrial kitchens, guest areas in hotels or bed-and-breakfasts, office break rooms, or any professional setting.
The grinder is intended for use only in **dry, indoor environments.**

Before Use

1. Read and retain the user manual.
2. Always unplug the appliance before cleaning or when not in use.
3. Use the appliance only for its intended purpose — grinding coffee beans.
4. Do not leave the appliance unattended near children.
5. The coffee grinder is not a toy — children must not operate it.
6. The appliance may only be used independently by persons with adequate physical and mental ability and sufficient experience.
7. If any of these abilities are limited, the grinder may only be used under supervision or after receiving proper instructions and understanding the associated risks.
8. Keep all packaging materials out of reach of children, as they may pose a suffocation hazard.
9. Do not leave the appliance unattended while grinding.
10. Do not leave the appliance operating without supervision.
11. Connect the grinder only to a properly installed outlet whose voltage matches the appliance's technical specifications.
12. Operate the appliance only on a stable, level surface.
13. Do not touch the appliance with wet hands.
14. Never immerse the coffee grinder or the power plug in water — this poses a severe risk of electric shock.
15. Do not use accessories not recommended by the manufacturer.
16. Do not clean the grinder housing under running water.
17. Do not use the appliance if the power cord is damaged.
18. Never insert fingers or objects into the grinder's moving parts.
19. Switch off the appliance immediately in case of malfunction.
20. Do not operate the grinder when empty.
21. Do not expose the appliance to overheating or direct sunlight.
22. Unplug the appliance before disassembling or removing any parts.

SAFETY INSTRUCTIONS

• If using an extension cord, it must meet the appliance's technical requirements. If unsure, consult a specialist retailer.
• Always switch off the appliance and unplug it:

– in case of malfunction,
– after use,
– when leaving the appliance unattended,
– before attaching or removing the bean container or grounds container,
– during storms,
– before cleaning.

• Always unplug the appliance by grasping the plug — never pull the cord.
• The power outlet must be easily accessible so the plug can be removed quickly if necessary. Position the cord so that no one can trip over it or accidentally pull the appliance down.
• Do not allow the power cord to bend sharply or come into contact with hot surfaces or sharp edges.
• Do not use the appliance if any part — especially the cord — is damaged, or if the appliance has been dropped.
• Do not modify the appliance in any way. Power cord replacement and any repairs must be carried out only by qualified technicians. Improper repairs may pose serious hazards.

Risk of Injury
• Moving parts may cause cuts or pinching injuries. Never operate the grinder without the grounds container or bean container lid properly in place.
• Do not reach into the container or insert any objects into the grinder while it is operating.
• Always unplug the appliance before cleaning or removing blockages.
• Additional cleaning instructions can be found in the "Cleaning" section.
• Improper use of the appliance may result in injury.

Preventing Material Damage
• The coffee grinder is designed for short operating cycles: after approx. 2 minutes of use, allow the appliance to cool for 10 minutes.
• Place the grinder only on a stable, clean and easily accessible surface.
• Keep the appliance away from heat sources (e.g., stove, oven).
• Do not use corrosive, abrasive or harsh cleaning agents.
• Use only original accessories.
• Use the grinder exclusively for grinding coffee — other substances may damage the appliance.
• Check the bean container for foreign objects before each use.
• Do not operate the grinder when empty.
• Protect the appliance from moisture, extreme temperature fluctuations, dust and strong vibrations.
• Certain furniture surfaces may damage the non-slip feet; use a protective mat if necessary.

3. PRODUCT SPECIFICATIONS

EU-CG836B

Parameter	**Value**
Model	CG836B
Power supply	220–240V, 50/60Hz
Power rating	200 W
Bean container capacity	6.7 oz / ~190 g
Grounds container capacity	3.5 oz / ~100 g
Net weight	2.5 lb ~1130 g
Dimensions	16.5 × 12.7 × 24.6 cm

4. PARTS OF THE COFFEE GRINDER

1. Bean container lid
2. Bean container
3. Upper burr
4. Timer LED display
5. On/Off button
6. Grinding time adjustment dial
7. Grinding fineness adjustment control
8. Grinding chamber lid
9. Grinding chamber
10. Cleaning brush
11. Grounds release button

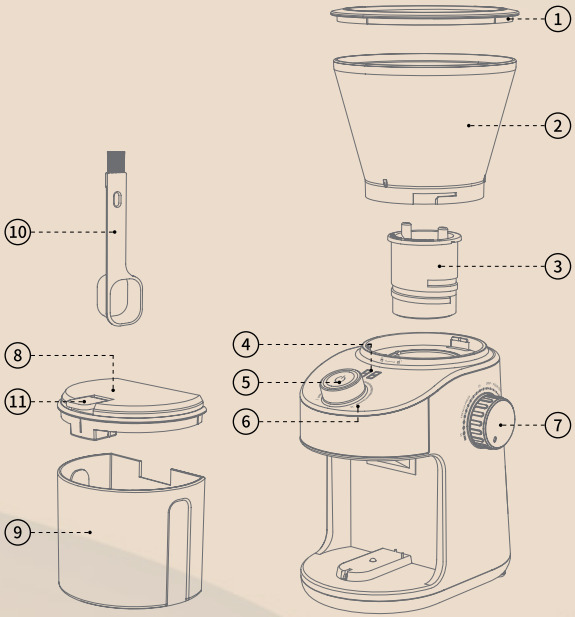

5. BEFORE FIRST USE

1. Always disconnect the appliance from the power supply before cleaning.
2. Remove the grounds container.
3. Turn the bean container counterclockwise until it aligns with the “unlock” symbol, then lift it off.
4. Wash the bean container and the grounds container in warm water using mild dish soap.
5. Dry all parts thoroughly.
6. Do not use abrasive sponges or corrosive cleaning agents.
7. Reassemble the containers, turning the bean container clockwise until it aligns with the “lock” symbol.

6. USING THE COFFEE GRINDER

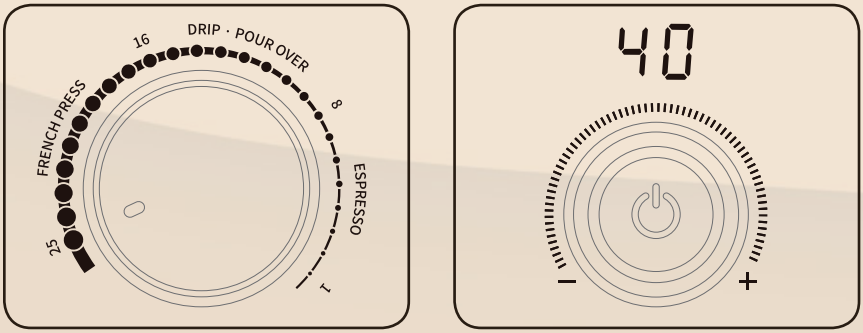

6.1. Setting the Grinding Fineness

WARNING – to prevent damage

- If there are already coffee beans in the container, adjust the grind setting only while the grinder is running.
- Otherwise, beans may become stuck between the burrs and block the motor.
- The grind setting is not displayed on the screen; it is visible only on the grind adjustment ring.
- Set the desired grind level between 1 (fine) and 26 (coarse) before filling the bean container.
- This helps prevent beans from getting stuck in the burrs.
- The suggested values serve only as general guidance.
- The ideal grind size for your preferred coffee preparation can best be determined through experimentation.

Turn the entire bean container along the grind adjustment ring until the desired setting aligns with the indicator on the front of the housing

6.2 Setting the Grinding Time

- Set the desired grinding time using the "+" and "–" buttons.
- The selected time is shown on the display.
- A longer grinding time results in a larger quantity of ground coffee.

6.3 Starting the Grinding Process

- Place the grounds container into the appliance.
- Put the lid on the bean container.
- Set the desired grind fineness.
- Set the grinding time.
- Press the On/Off button to start grinding.
- The appliance switches off automatically when the set time has elapsed.

6.4 Interrupting the Grinding Process

- Press the On/Off button again to stop grinding at any time.

6.5 Removing the Grounds

- Shake the container gently to loosen any grounds stuck to the walls.
- If needed, use the supplied cleaning brush.



7. MAINTENANCE AND CLEANING

DANGER – Risk of electric shock

• Always unplug the appliance before cleaning.

• Protect the grinder from moisture — keep it away from splashing water and never immerse it in water.

CAUTION – To prevent material damage

• Do not use corrosive, abrasive, or aggressive cleaning agents.

• Clean the appliance carefully to avoid damaging the housing.

• Disassembling and Cleaning the Appliance

• Unplug the appliance from the power outlet.

• Remove the grounds container and take off its lid.

• Empty any remaining coffee grounds.

• Wash the container and lid with warm water and mild dish soap, then dry completely before reassembling.

• Removing the Bean Container

• Turn the bean container counterclockwise until the arrow aligns with the open padlock symbol.

• Pull upward to remove the container.

• Remove the lid and empty the container if necessary.

• Clean the container and lid with warm, soapy water, then allow them to dry fully before adding coffee beans again.

Cleaning the Grinding Mechanism

• Use the supplied cleaning brush to regularly brush out the burrs.

• For thorough cleaning or to remove stuck coffee beans or foreign objects:

• Hold the removable funnel and gently turn it counterclockwise until it clicks free.

• Pull upward and remove it from the appliance.

• Clean the inside of the grinding mechanism with the cleaning brush, removing any trapped particles or foreign objects.

• If necessary, wipe the exterior housing with a slightly damp cloth, then dry with a soft, lint-free cloth.

Reassembling the Appliance

• Before reassembling, ensure that no coffee beans or grounds remain inside the grinding mechanism.

• All parts must be completely dry before reassembly.

• Align the components with the markings and insert them back into place correctly.

8. TROUBLESHOOTING

The appliance is not grinding

Possible Cause	Solution
• The bean container is not locked in place	• Turn it clockwise until it aligns with the "lock" symbol
• The grinding mechanism is not correctly positioned	• Reinsert it properly
• The On/Off button was not pressed correctly	• Press the button again
• The appliance is not connected to power	• Plug it into a power outlet

Insufficient amount of ground coffee

Possible Cause	Solution
• Incorrect grind setting	• Adjust to a finer grind
• Too few coffee beans in the container	• Add more coffee beans
• The burrs are clogged	• Clean the grinding mechanism

A készülék leáll őrlés közben

Possible Cause	Solution
• The appliance has overheated	• Unplug it and wait 15 minutes before resuming use
• Power outage	• Wait until power is restored

9. DISPOSAL

The appliance and its packaging are made of recyclable materials. Please help protect the environment by properly separating waste.
Place paper, cardboard and lightweight packaging materials into the appropriate local **recycling collection points.** The appliance must **not be disposed of with household waste.** Regulations require that used electrical devices be taken to designated collection facilities. Electrical appliances may contain materials that, if not disposed of correctly, can be harmful to the environment and human health.
For information about free disposal options, contact your local municipality or waste management service provider.
We wish you much joy in using your appliance!

Model: CG836B
Importeur: ARTIS Kft. – 8000 Székesfehérvár, Bem u. 40.
Webshop: **www.vegital.hu**
Facebook: **Vegital, a tejmentes ital**
Telefonszám: **06707779220**
Email: **info@vegital.hu**
In case of a technical problem, our service department can be reached at the following phone number: Tel.: **+36 20 524 5156,** or you can report the issue by filling out the form at **www.vegital.hu/szerviz**